



Title: Untitled-1
Creator: FreeHand 10.0
Preview: This EPS picture was not saved with a preview (TIFF or PICT)
included in it
Comment: This EPS picture will print to a postscript printer but not to
other types of printers

Portable FireWire Hard Disk DV Recorder

User's Guide



QuickStream DV - Portable FireWire Hard Disk DV Recorder - 2

Copyrights

Copyright © 2003 MCE Technologies, LLC. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of MCE.

Trademarks

Apple, Mac, Macintosh and FireWire are registered trademarks of Apple Computer, Inc. Sony and i.LINK are registered trademarks of Sony Electronics. Microsoft, Windows, Windows 98 SE, Windows Millennium Edition, Windows 2000 and Windows XP are registered trademarks of Microsoft Corporation.

Changes

The material in this document is for information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, MCE assumes no liability resulting from errors or omissions in this document, or from the use of the information contained herein. MCE reserves the right to make changes or revisions in the product design or the product manual without reservation and without obligation to notify any person of such revisions and changes.

Federal Communications Commission Radio Frequency Interference Statement (FCC)

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one of the following measures:

- Reorient or relocate the receiving antennas.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the reseller or an experienced radio/TV technician for help.

Shielded cables and I/O cards must be used for this equipment to comply with the relevant FCC regulations.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Manufacturer's Declaration for CE Certification

We, MCE Technologies, LLC, solemnly declare that this product conforms to the following European standards:

Class B EN60950, EN55022, EN50082-1, EN60555-2

With reference to the following conditions:

73/23/EEC Low Voltage directive

89/336/EEC EMC Directive



QuickStream DV - Portable FireWire Hard Disk DV Recorder - 3

Introduction

Congratulations on the purchase of your MCE Technologies (MCE) QuickStream DV Portable FireWire Hard Disk Digital Video (DV) Recorder. The QuickStream DV was designed to connect directly to, and record digital video footage directly from, your DV camcorder, in your choice of DV file format, thereby completely eliminating the need to transfer, capture, or convert clips prior to editing. When you are finished shooting, simply plug the QuickStream DV into your DV editing workstations and your footage is ready for editing... IMMEDIATELY!

The MCE QuickStream DV's industrial designed enclosure incorporates a 1/4-20 screw-socket... The very same socket that is found on the bottom of virtually every still and video camera ever made. This means that there are nearly an endless amount of mounting adapters already in existence that you can now use with the QuickStream DV. And included with the QuickStream DV is a hot shoe adapter for mounting it directly to your DV camcorder's accessory/hot shoe. A belt clip adapter is also included in order to secure it to your belt if this location is more convenient for you. The QuickStream DV does not simply compliment your existing DV camera equipment, it integrates into and becomes part of it.

The MCE QuickStream DV also functions as a standard IEEE1394/FireWire Hard Drive when connected to your Mac, PC or standalone video editing workstation. DV footage recorded by the QuickStream DV are easily found in a special "Media" folder on the drive and, in addition, your own data can be saved, stored, or archived elsewhere on the drive.

The MCE QuickStream DV includes MCE StreamManager clip organizing software designed for use with Mac OS X (v10.2 or later). MCE StreamManager instantly displays available recording time as well as displays all clips recorded with the QuickStream DV and allows the user to preview, rename, sort, delete, copy, and move them.

Package Contents

The following items are included with your MCE Technologies QuickStream DV:

- QuickStream DV Portable Hard Disk DV Recorder
- MCE StreamManager software (for MacOS 10.2 or later)
- 4 pin to 6 pin Retractable FireWire Cable
- 6 pin to 6 pin FireWire Cable
- Camera Accessory Shoe (Hot Shoe) Mount
- Belt Clip Attachment
- Universal 100-240V AC Adapter
- User's Guide



QuickStream DV - Portable FireWire Hard Disk DV Recorder - 4

Minimum System Requirements

Hardware requirements:

- Digital Video (DV) Camcorder with FireWire/IEEE1394/i.LINK Port
- Mac or PC equipped with built-in FireWire/IEEE 1394/i.LINK, or a FireWire/IEEE 1394/i.LINK interface card.

System requirements:

- Mac OS 9.2.2 and 10.2 or later, G3 or G4 Processor, 333MHz or greater
- Windows 98 SE (Second Edition), Windows Me (Millennium Edition), Windows 2000, or Windows XP

What is DV?

"DV" stands for Digital Video.

Digital Video is also referred to as computerized video. Traditionally, video was stored on tapes. It was a sequence of stills, or frames, that when played looked like moving video. Digital Video has many of the similarities in that it is still a sequence of frames. What's different is how it is stored, how it is played back, what can be done with it when you put it on a computer, and how it never loses quality no matter how many times you copy a Digital Video clip.

Popular Digital Video formats include .MOV and .AVI. When a DV camcorder records video to a DV tape or to the QuickStream DV, it is recording the video and audio arriving through the lens and microphone in digital format i.e. in bits and bytes, in the form of millions of "1's" and "0's" that an appropriate program can read and playback to you in the form of a recognizable video.

When on a computer you can perform a variety of tasks on digital video and audio using a non-linear editing (NLE) application... from cleaning up the hiss on the audio to brightening scenes, adding transitions and special effects, adding titles, cutting and pasting clips, removing the audio and replacing it with a different audio track, etc.



There are three different DV formats on the market today: "MiniDV," the predominant format used by most current DV camcorders. The others are "DVCAM" and "DVCPRO," and these are used primarily by professional DV camcorders. The QuickStream DV works with all three of these DV formats.



There are two television signal video standards that are used in different parts of the world. One is "NTSC" (720 x 480 pixels, 29.97 frames/second); the



QuickStream DV - Portable FireWire Hard Disk DV Recorder - 5

other is "PAL" (720 x 576 pixels, 25 frames/second). The QuickStream DV works with both NTSC and PAL formats.

QuickStream DV Features

The usual workflow of the videographer in going from shooting to editing is that video footage is first recorded by the DV camcorder onto a tape (e.g., MiniDV tape) located inside the DV camcorder's tape mechanism. The tape must then be rewound and played/transferred from the DV camcorder to the computer, via FireWire, before any editing can take place. This transfer process, however, is extremely time consuming. For example, two hours of DV recording will take at least two hours to transfer from tape to computer. Besides being time consuming, both the camera and computer generally cannot be used for anything else during this time. By using the QuickStream DV and recording directly onto the drive while shooting, this entire transfer process is eliminated. When shooting is over, users simply connect the QuickStream DV to their computer via FireWire/IEEE 1394/i.LINK, find their video files in the designated folder and start editing or performing whatever functions are needed immediately.

DV Recording in Camera and VCR/VTR Modes

Either record DV footage with the QuickStream DV while shooting or record DV streams with the QuickStream DV by playing back previously captured DV streams from tape by setting the DV camcorder to VCR/VTR mode or using a DV tape deck.

DV Editing or DV Rendering

The QuickStream DV utilizes what is called a FAT32 file system. This file system is compatible with Mac, PC, Linux, and standalone video editing systems. The DV streams recorded with the QuickStream DV are captured and named as "CLIPxxyy.mov", "CLIPxxyy.dv", or "CLIPxxyy.avi" files depending on which file format was selected. Users are able to easily find the clips in the designated folder and open or import them into their video editing application immediately.

External Firewire Hard Disk

The QuickStream DV functions just like any FireWire-based external hard disk when connected to a Mac or PC. In addition to holding the recorded video clips, users can save, store, or transfer any other data they wish.

Internal Battery and External Power Input

The QuickStream DV is self-powered by an internal re-chargeable Lithium-Ion polymer battery as the FireWire/IEEE1394/i.LINK port on DV Camcorders do not supply any type of bus power. When connected to the included AC Adapter or to a FireWire port which supplies power, the internal battery is automatically



QuickStream DV - Portable FireWire Hard Disk DV Recorder - 6

recharged as needed.


Quick Erase Button

All recorded clips on the QuickStream DV can be deleted by utilizing a recessed quick erase button at the rear of the drive.

Software

MCE StreamManager footage organizing software for Mac OS 10.2 or later as well as PC and Mac-based hard disk partition/format utilities are included.

QuickStream DV Interface and Control Panel

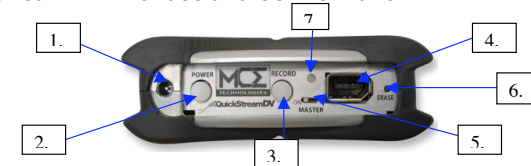

The following is a description of the ports and controls located on the back panel of the QuickStream DV:

1. AC Adapter Port – The AC Adapter port of the QuickStream DV can accept any voltage between 6 to 18V to power and charge the device. It is a reverse polarity plug so when using it with a power supply other than the included AC Adapter please check the polarity of your power supply.
2. Power Button – This button is labeled POWER and is the left-most button on the control panel. This button turns the QuickStream DV on or off provided that the Master Power Switch (described below) is in the left, or 'on', position. This button glows green when activated.
3. Record Button – This button is labeled RECORD and is located directly in the middle of the control panel. This button glows red when activated.
4. FireWire port – six-pin FireWire port into which the FireWire cable from a DV camera or computer is plugged.
5. Master Power Switch – This switch, labeled MASTER, is located between the FireWire port and the Record button. It must be in the left-most, labeled "ON", position during normal use of the QuickStream DV. If the QuickStream DV is to be stored for any length of time or any time it is transported, then this switch should be moved to the right-most position. This will preserve battery power during transportation and long periods of non-use.
6. Quick-Erase Button - To the far right of the end panel (immediate right of the FireWire port) is a recessed push-button. This is the Quick-Erase button and serves to erase all DV clips the QuickStream DV has recorded.
7. Charge-Indicator LED – In between the RECORD button and the FireWire



QuickStream DV - Portable FireWire Hard Disk DV Recorder - 7
port is a blue LED which glows brightly when the QuickStream DV has enough current from either a powered FireWire bus or from an AC adapter to charge its internal Lithium-Ion polymer battery.

Connect the QuickStream DV to your DV Camcorder

Mounting the QuickStream DV to your DV Camcorder's Accessory Shoe

The MCE QuickStream DV's industrial designed enclosure incorporates a 1/4-20 screw socket (see Fig. 1)... The very same screw socket that is found on the bottom of virtually every still and video camera ever made. And included with the QuickStream DV is an accessory/hot shoe adapter (see Fig. 2) for mounting it directly to your DV camcorder's accessory/hot shoe.



Fig. 1



Fig. 2

Follow these instructions in order to mount the QuickStream DV to your DV camcorder's accessory/hot shoe:

1. Insert the end of the accessory shoe adapter (top of Fig. 2) into the 1/4-20 screw socket (Fig. 1) of the QuickStream DV.
2. Turn clockwise for a few revolutions only! Be careful here!! Inserting or twisting the accessory shoe adapter too far may damage the QuickStream DV!
3. Secure the accessory shoe adapter to the QuickStream DV using the spin tightener on the accessory shoe adapter.
4. Now slide the accessory shoe adapter onto the accessory/hot shoe of your DV camcorder.
5. Secure to your DV camcorder using the spin tightener on the accessory shoe adapter.

Connecting the QuickStream DV to the Belt Clip

A belt clip adapter (see Fig. 3) is included if you wish to use the QuickStream DV attached to your belt.



Fig. 3

QuickStream DV - Portable FireWire Hard Disk DV Recorder - 8



Fig. 4

Follow these instructions if you wish to attach the QuickStream DV to your belt:

1. Insert the threaded end of the belt-clip button (right of Fig. 4) into the 1/4-20 screw-hole (Fig. 1) of the QuickStream DV and tighten securely.
2. Attach the belt clip to your belt and insert the belt clip button (left of Fig. 4) into the slot of the belt clip and slide down until it secures in place with a snap.
3. To release, rotate the QuickStream DV to a horizontal position and depress the belt clip near the bottom and slide the QuickStream DV upwards and out.

Because the QuickStream DV incorporates an industry standard 1/4-20 mounting screw-hole, there are many other mounting options available on the market. See the particular instructions that accompany those mounting options to properly mount the QuickStream DV. Always be sure never to insert the threaded screw into the 1/4-20 screw-hole of the QuickStream DV too far in order to prevent damage to the QuickStream DV.

Connecting the QuickStream DV to the FireWire/IEEE1394/i.LINK port of your DV Camcorder

The QuickStream DV has a 6 pin FireWire connector built in (see Fig. 5). Using the included 6 pin to 4 pin retractable FireWire cable (Fig. 6), connect the 6 pin FireWire connector of the QuickStream DV to the 4 pin FireWire/IEEE1394/i.LINK connector on your DV camcorder (Fig. 7). Pull from the ends of the retractable cable to release more cable... never pull from the middle hub. To retract the cable, pull slightly on the ends and the cable will retract all the way in.



Fig. 5



Fig. 6



Fig. 7



Selecting the Recorded File Format

The QuickStream DV ships from the factory preset to record DV in the QuickTime (.mov) file format. If your video editing program utilizes the Quicktime (.mov) file format (e.g. Apple Final Cut Pro/Express, QuickTime Pro, etc.) then this is the file format you require. To instruct the QuickStream DV to record in a different file format follow the instructions below:


1. Make sure the QuickStream DV is plugged into AC power using the supplied AC power adapter and that the "MASTER" power switch on the QuickStream DV is in the "ON" position.
2. Turn on the QuickStream DV by pressing the "POWER" button.
3. In a moment, both "POWER" and "RECORD" lights on the QuickStream DV will flash simultaneously. This indicates that the drive is ready.
4. At this point, we will enter the QuickStream DV's "File Format Specification" mode. We do this by pressing and holding the "RECORD" button for five seconds, then releasing. This indicates to the QuickStream DV that we are going to tell it which file format to record in.
5. When you release the "RECORD" button, the green "POWER" button will be lit. This is the QuickStream DV's way of telling us that it is currently set to record in the QuickTime (.mov) file format.
6. To change the file format, press and release the "RECORD" button.
7. The red "RECORD" button is now steadily lit. This indicates the Windows AVI2 (.AVI) file format. If your video editing program utilizes this format then simply wait a few moments. The QuickStream DV buttons will begin to flash as the QuickStream DV saves this setting. When the "POWER" and "RECORD" buttons are blinking simultaneously again, it is ready. Continue on to the section titled "DV Recording."
8. To further change the recorded file format, quickly press and release the "RECORD" button.
9. Now both the red "RECORD" button AND the green "POWER" buttons are continuously lit. This indicates the Canopus AVI2 (.AVI) file format. If your video editing program utilizes this format then stop here. The QuickStream DV buttons will begin to flash as the QuickStream DV saves this setting. When the "POWER" and "RECORD" buttons are blinking simultaneously it is ready. Continue on to the section titled "DV Recording."
10. Again quickly press and release the "RECORD" button.
11. Now both the red "RECORD" button AND the green "POWER" buttons are off. This indicates the Raw DV (.dv) file format. If your video editing program utilizes this format then stop here. In a few moments the QuickStream DV buttons will begin to flash as the QuickStream DV saves this setting. When the "POWER" and "RECORD" buttons are blinking




DV Recording

DV Recording from DV Camcorder While Shooting

1. Make sure the "MASTER" power switch on the QuickStream DV is in the "ON" position.
2. If you have not already done so, turn on your DV camcorder.
3. Now connect the QuickStream DV to your DV camcorder's FireWire/IEEE1394/i.Link port.
4. Turn on the QuickStream DV by pressing the "POWER" button.
5. The QuickStream DV recognizes your DV camcorder's DV signal and prepares itself. In just a few moments the green "POWER" button will remain lit and the QuickStream DV is ready.
6. If you have a tape inserted in your DV camcorder, press the "Record" button on your DV camcorder to command the QuickStream DV to "Start" and "Stop" recording. IMPORTANT: You must have a tape inserted in your DV camcorder in order to control the QuickStream DV from the DV camcorder. Each time you press the "Record" button on your DV camcorder to "Start" and "Stop" recording a new clip is created on the QuickStream DV.
7. If you are shooting "Tapeless" (i.e. your DV camcorder is in "Standby" mode) and will be recording only to the QuickStream DV and not to tape, then press the "RECORD" button on the QuickStream DV in order to "Start" recording. Press it again to "Stop" recording. Each time you press the "RECORD" button on the QuickStream DV to "Start" and "Stop" recording a new clip is created.
8. When finished, power off the QuickStream DV by pressing the "POWER" button.
9. If you will be transporting or storing the QuickStream DV for any length of time, slide the "MASTER" power switch away from the "ON" position.

 The QuickStream DV constantly monitors the recording time available. If there is less than one minute of recording time remaining the recording function is automatically disabled and it is not possible to begin a new recording. If, during a recording session, the recording time available falls to below one minute, the red "RECORD" LED flashes rapidly as an indicator. If recording continues, then recording will self terminate once the QuickStream DV's capacity has been reached.

 As the QuickStream DV records DV footage, shots are automatically segmented at about the 8.5 minute or 1.8GB point (4.5 minute or 1GB for .mov files) into separate files. This is due to the file size limitation of the QuickStream



QuickStream DV - Portable FireWire Hard Disk DV Recorder - 11

DV's on board FAT32 file system. There is no dropping of frames and the segmentation is completely smooth. The QuickStream DV names the clips it records according to whether they are segments belonging to one long shot or are individual shots in the form "CLIPaabb.mov (or .dv or .avi etc.). The first two digits "aa" after "CLIP" refer to a particular shot and the last two digits pertain to segmented clips belonging to that shot. For example, individual shots always begin with clips named CLIP0000.mov, CLIP0100.mov, CLIP0200.mov etc. If, for example, the shot beginning with "CLIP0400.mov" lasts longer than the 1.8GB (or 1GB for .mov) size then the proceeding segmented clips created automatically by the QuickStream DV are named CLIP0401.mov, CLIP0402.mov, CLIP0403.mov... up to CLIP0499.mov. In this way you can always tell which clips belong to a particular shot.

DV Recording from DV Camcorder in VCR/VTR Mode or from a DV Deck

1. Make sure the "MASTER" power switch on the QuickStream DV is in the "ON" position.
2. If you have not already done so, turn on your DV camcorder or DV deck.
3. Now connect the QuickStream DV to your DV camcorder's, or DV deck's, FireWire/IEEE1394/i.Link port.
4. Turn on the QuickStream DV by pressing the "POWER" button.
5. Cue the DV Tape on your DV camcorder or DV deck to the point where you want to record to the QuickStream DV and hit "Pause".
6. The QuickStream DV recognizes your DV camcorder's, or DV signal and prepares itself. In just a few moments the green "POWER" button will remain lit and the QuickStream DV is ready.
7. Press the "RECORD" button on the QuickStream DV in order to "Start" recording and press the "Pause" button again on your DV camcorder or DV deck to begin playing. The QuickStream DV will record whatever video is recorded to the DV tape inside your DV camcorder or DV deck until the tape is finished or there is no more recorded video on the tape.
8. When finished, power off the QuickStream DV by pressing the "POWER" button.
9. If you will be transporting or storing the QuickStream DV for any length of time, slide the "MASTER" power switch away from the "ON" position.

Quick-Erase Button

At the far right of the interface control panel of the QuickStream DV is a recessed button marked "ERASE." This button will erase all DV files recorded by the QuickStream DV from the drive and can only be done while the QuickStream DV is connected to a DV camera.. Please follow the instructions below to use this function:




QuickStream DV - Portable FireWire Hard Disk DV Recorder - 12

1. Turn on your DV camcorder and set it to "Camera" mode.
2. Connect your DV camcorder to your QuickStream DV via the FireWire/IEEE1394/i.LINK port.
3. Turn the QuickStream DV on by pressing the green "POWER" button.
4. Once the QuicksStream DV has finished synchronizing with the DV camcorder the green "POWER" button will remain steadily lit.
5. Using the tip of a pen or other sharp object, depress the "ERASE" button for 5 seconds or more and then release.
6. The interface lights will blink rapidly and then stop... indicating that any clips previously recorded by the QuickStream DV have been erased.

Internal, Rechargeable, Lithium-Ion Polymer Battery

The QuickStream DV contains a state-of-the-art rechargeable Lithium-Ion polymer battery capable of running the QuickStream DV in standby mode for about 3-4 hours and to record continuously for about 90 minutes per charge. When the QuickStream DV is plugged into an AC Adapter, or connected to a FireWire port which supplies bus power, the drive automatically recharges its battery using whatever leftover current is available. A blue LED in the interface panel lights up to indicate that the battery is charging and turns off when the battery is fully charged. Charge time from empty to fully charged is about 2 hours when used with the supplied AC adapter and the QuickStream DV is powered off. Expect longer charge times if the QuickStream DV is in use during charging.

 If the QuickStream DV's battery is below a certain charge level, then when the "POWER" button is pressed, the "POWER" LED will flash quickly. Since the battery power is so low, the recording function is disabled. During recording, if the battery's output falls below a specific point, the QuickStream DV terminates recording and powers down.

Connect the QuickStream DV to your Workstation


The QuickStream DV, when connected to a Mac, PC or standalone video editing workstation functions as a standard FireWire hard drive. The video clips recorded by the QuickStream DV are easily found in a particular folder on the drive. Follow the instructions below to connect the QuickStream DV to your workstation and find the recorded video clips:


1. Make sure the "Master" power switch on the QuickStream DV is in the "On" position.
2. Connect the QuickStream DV to your computer's FireWire/IEEE1394/i.LINK port. You may see a blue LED light up. This



QuickStream DV - Portable FireWire Hard Disk DV Recorder - 13

- indicates that the QuickStream DV has sensed a power source and has begun to charge its internal lithium-ion polymer battery.
- Turn on the QuickStream DV by pressing the "Power" button.
 - The QuickStream DV recognizes your computer's FireWire signal and its icon soon mounts on your desktop (Mac) or can be found under "My Computer" (Windows).
 - To find the video clips recorded by the QuickStream DV, users can navigate to the "Movie" folder, then "Media" folder on the QuickStream DV which is where the recorded clips are stored.
 - Mac OS X (10.2 or later) may launch StreamManager to preview, rename, and move or copy clips on the QuickStream DV.
 - If you wish to disconnect the QuickStream DV from your workstation while your workstation is still on, you must first "Eject" the QuickStream DV from the workstation:
 - PC Users click the "Device Eject" icon in the lower right hand corner of your toolbar and then select "Stop MCE Technologies MCE QuickStream DV IEEE 1394 SBP2 Device". Then wait for a message to appear which says "The MCE Technologies MCE QuickStream DV IEEE 1394 SBP2 Device can now be safely removed from the system." Click OK, turn off the QuickStream DV by pressing the "POWER" button, and disconnect the FireWire cable from the unit.
 - Mac Users highlight the QuickStream DV and select "Command-E" (⌘-E), or drag the QuickStream DV icon to the trash icon. When the QuickStream DV's icon disappears from the screen turn off the QuickStream DV by pressing the "POWER" button and disconnect the FireWire cable from the unit.

 The QuickStream DV operates like a high performance FireWire hard drive when connected to your computer workstation and can be used to store any type of data you'd like. However, do not put your own data in the "Media" folder where the QuickStream DV stores the recorded video clips as this is a special folder and placing other types of data here may interfere with the QuickStream DVs recording function.

 The QuickStream DV is formatted as a FAT32 volume in order to be cross platform compatible and this particular format is necessary for proper recording function when connected to a DV camcorder. Do not reformat or reinitialize the QuickStream DV as this will interfere with the QuickStream DVs recording function.



QuickStream DV - Portable FireWire Hard Disk DV Recorder - 14

MCE StreamManager Software for Mac OS X

A folder labeled Mac OS X software can be found on the QuickStream DV. Inside this folder you will find the MCE StreamManager software. You may copy the software onto your Mac's main hard drive or you may launch it from the QuickStream DV. The software is extremely intuitive and easy to use and allows you to quickly preview, sort, rename, copy, move or delete clips you've recorded onto the QuickStream DV. You may set it to auto-launch anytime a QuickStream DV is detected on your system. See the accompanying Read-Me file for more information and any updated features added since this manual was printed.

File Formats Used by Common Video Editing Applications

<i>Application</i>	<i>File Format</i>
Apple Final Cut Pro / Express	.mov (QuickTime movie)
Adobe Premiere	.avi (Standard AVI2)
Apple iMovie 3	.dv (Raw DV)
Apple QuickTime Pro	.mov or .dv
Canopus DV Storm	.avi (Canopus AVI2)
Roxio VideoWave	.avi (Standard AVI2)
Ulead Media Studio & Video Studio	.avi (Standard AVI2)
Sonic Foundry Vegas 3.x	.avi (Standard AVI2)
Sonic MyDVD	.avi (Standard AVI2)
Pinnacle Studio	.avi (Standard AVI2)
Media 100 Cinestream (Mac OS)	.avi (Standard AVI2)
Avid Xpress DV 3.0	Proprietary (OMF)
MacroSystem/Casablanca Standalone Editing Station	.dv (Raw DV)

Technical Support

Check the MCE Technologies web site at <http://www.mcetech.com> for support information and frequently asked questions regarding the QuickStream DV.

Comprehensive technical support for the QuickStream DV is available by phone at 949-458-0800 or e-mail at: dv@mcetech.com When phoning or e-mailing please provide configuration details such as platform, operating system, brand and model of DV camcorder when describing the problem or requesting information.



APPENDIX

MCE QuickStream DV Specifications

Interface: 6-Pin FireWire/IEEE1394/i.LINK port

Multi-Attachment System

QuickStream DV Enclosure Incorporates Industry Standard 1/4-20 Screw Socket Making Available a Wide Range of Mounting and Attachment Options

Included Attachments

Camera Accessory Shoe (Hot Shoe) Mount; Belt Clip Attachment

Supported DV Camera Formats:

MiniDV, DVCAM, DVCPRO; NTSC & PAL

Supported Platforms

Mac OS 9 & X (10.2 or later); Windows 98SE, ME, 2000, XP; Linux

Supported Recorded File Formats

QuickTime MOV (.mov), Windows AVI2 (.avi), Raw DV (.dv), Canopus AVI2 (.avi)

Video Editing Software Supported

Compatible with Mac, PC & Standalone Non-Linear Editing Software Including: Final Cut Pro, Adobe Premiere, Final Cut Express, iMovie, QuickTime Pro, Sonic Foundry Vegas, Canopus DV Storm, Pinnacle Studio, etc.

Operating Temperature Range: 32° to 130° F; 0° to 55° C

Storage Temperature Range: -8° to 150° F; -22° to 65° C

Maximum Relative Humidity: 95%

Internal Battery

Rechargeable, Lithium-Ion Polymer; Provides 90 minutes of Non-Stop Recording Time; Rechargeable through AC Adapter Port or FireWire Interface

Power Interface: +6 to +18V DC Input; FireWire Bus-Powered

Dimensions (LxWxH): 5.5 x 3.5 x 1.2 in (140 x 90 x 30 mm)

Weight: 9 oz.



Warranty

MCE warrants your QuickStream DV (Drive) against any defect in material and workmanship, under normal use, for a period of one year from the original purchase date. In the event this product is found to be defective within the warranty period, MCE will, at its option, repair or replace the defective Drive.

This warranty is void if:

- The Drive was operated/stored in abnormal use or maintenance conditions;
- The Drive is repaired, modified or altered, unless such repair, modification or alteration is expressly authorized in writing by MCE;
- The Drive was subjected to abuse, neglect, lightning strike, electrical fault, improper packaging or accident;
- The broken part is a replacement part.

• The tamper seal on the Drive casing is broken.

MCE will not, under any circumstances, be liable for direct, special or consequential damages such as, but not limited to, damage or loss of property or equipment, loss of profits or revenues, cost of replacement goods, or expense or inconvenience caused by service interruptions.

Under no circumstances will any person be entitled to any sum greater than the purchase price paid for the Drive.

To obtain warranty service, call MCE Technical Support. You may be asked to furnish proof of purchase to confirm that the drive is still under warranty.

All drives returned to MCE must be securely packaged in their original box and shipped with postage prepaid.

MCE Technologies, LLC

30 Hughes, Ste. 203

Irvine, CA 92618 USA

949-458-0800, 800-5000-MAC

949-458-1803 fax

dv@mcetech.com

<http://www.mcetech.com>